This is unique design product, please read this installation guide carefully which we prepared for you meticulously

Step 1: Remove left side panel.

Unscrew two thumbscrews on the rear part of the left side panel.

Push the doorknob to right hand side.

Remove left side panel by pulling it outward.

Step 2: Install motherboard

Turn the case to the position as shown on above picture, and prepare motherboard for installation.

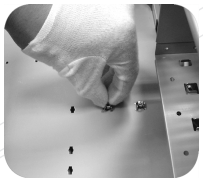

Screw the stand-offs onto the holes of the motherboard tray.

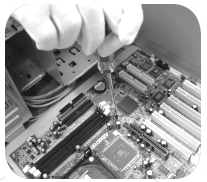

Put the motherboard on top to the stand-offs and screw it by #6-32 crews onto the casing.

Step 3: Install power supply

Turn the power supply to the right direction and slide it into the correct hole position.

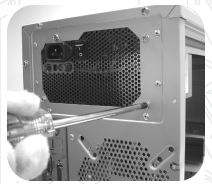

Use screws to fasten power supply unit into casing.

Step 4: Install Floppy Drive, Hard Drive and Optical Drive.

Unscrew the 5.25" device bay cover from the holder.

Remove the 5.25" bay cover out of casing.

CD-ROM used for installation.

Slide the CD-ROM/DVD-ROM into the device bay and push it backward to the casing.

Push the lock switch to right side and lock it by the locker.

Unscrew 3.5" device bay cover from the device holder.

Remove 3.5" bay cover out of casing.

Slide the floppy into the 3.5" device holder until its front side aligns with front of device bay cover.

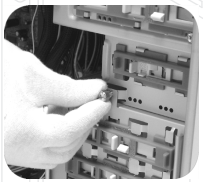

Unscrew two thumbscrews from 3.5" device holder for hard disk drive.

Pull the 3.5" device holder out of the casing.

Slide the hard disk drive from back side until its front side aligns and fixed with front of the device bay cover

Slide the 3.5" device holder with hard disk drive into the casing and fasten it by two screws.

Step 5: Install Case Fan (Optional)

You can select either 80mm or 90mm or 120mm case fan for your computer system in the front or back of the casing.

Put the selected case fan aim for right hole position, (Please note the wind direction for case fan, which need to blow out.)

Use four screws to fasten case fan into the casing.

Step 6: Install left side panel.

Put the left side panel back to the casing.

Slide it forward until its aligns with the front panel and lock the doorknob.

You can use attached key to lock your system.

Screw two thumbscrews onto the rear part of left side panel.

You have finished installation.